



Flair Furniture

Explorer Playhouse Bed Shorty

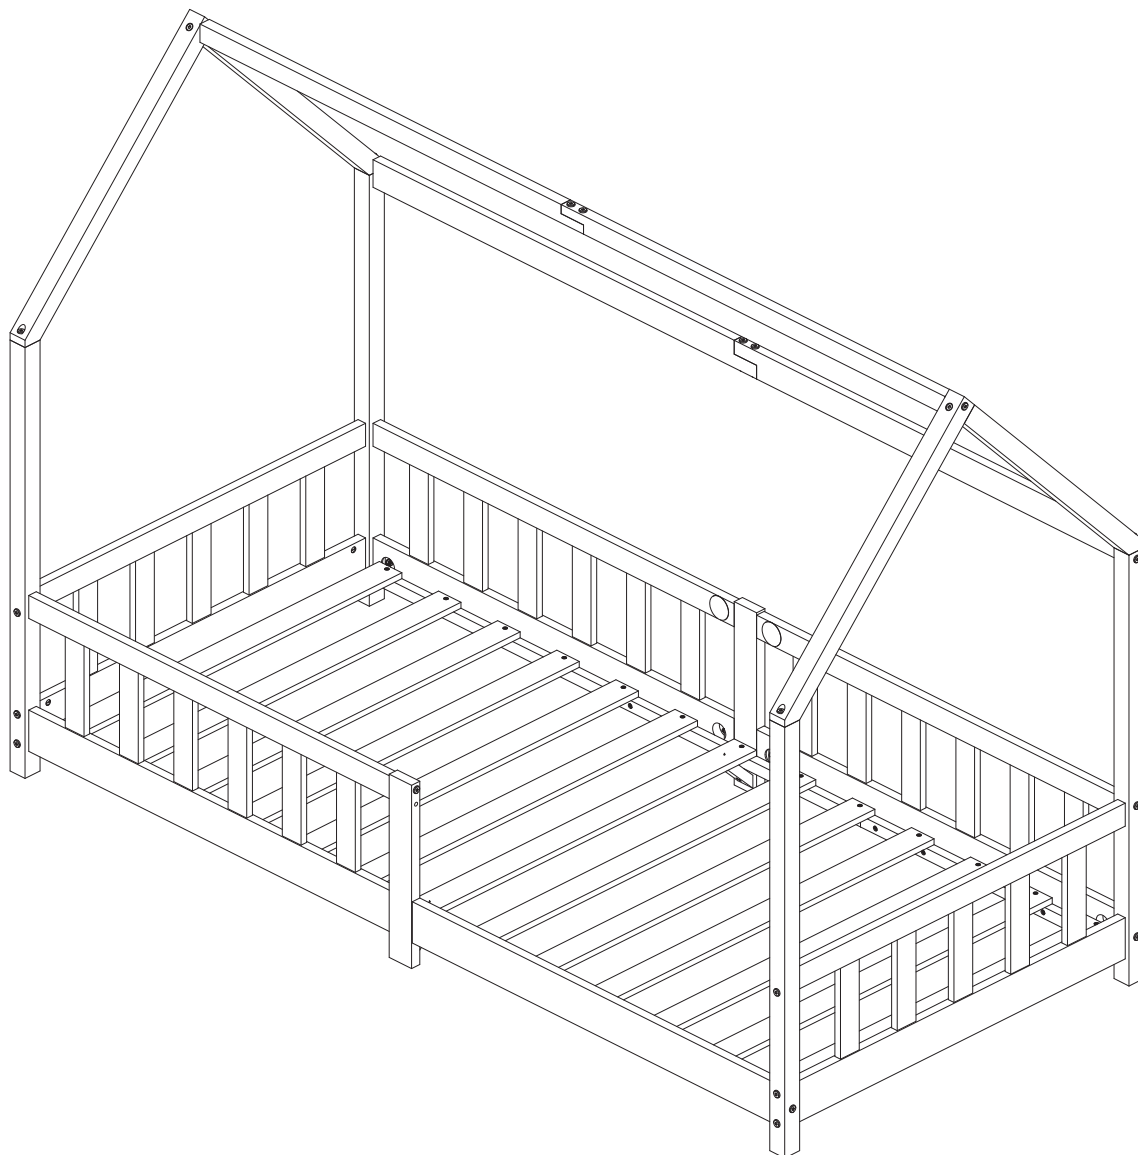


READ THE ASSEMBLY INSTRUCTIONS CAREFULLY. IDENTIFY THE ELEMENTS CONSTITUING YOUR PIECE OF FURNITURE. GROUP AND CHECK THE HARDWARE FITTINGS. GET THE TOOLS NEEDED. CLEAR SPACE TO WORK. PROCEED TO ASSEMBLE









NEVER FORCE THE FITTINGS. TIGHTEN THE SCREW AFTER USING FOR SOMETIME. KEEP YOUR ASSEMBLY INSTRUCTIONS, IT COULD HELP FOR BETTER COMMUNICATION WITH YOUR STORE. IN THE EVENT OF QUERY.

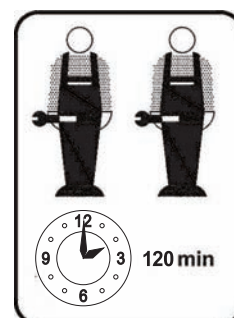

EXPLODED VIEW

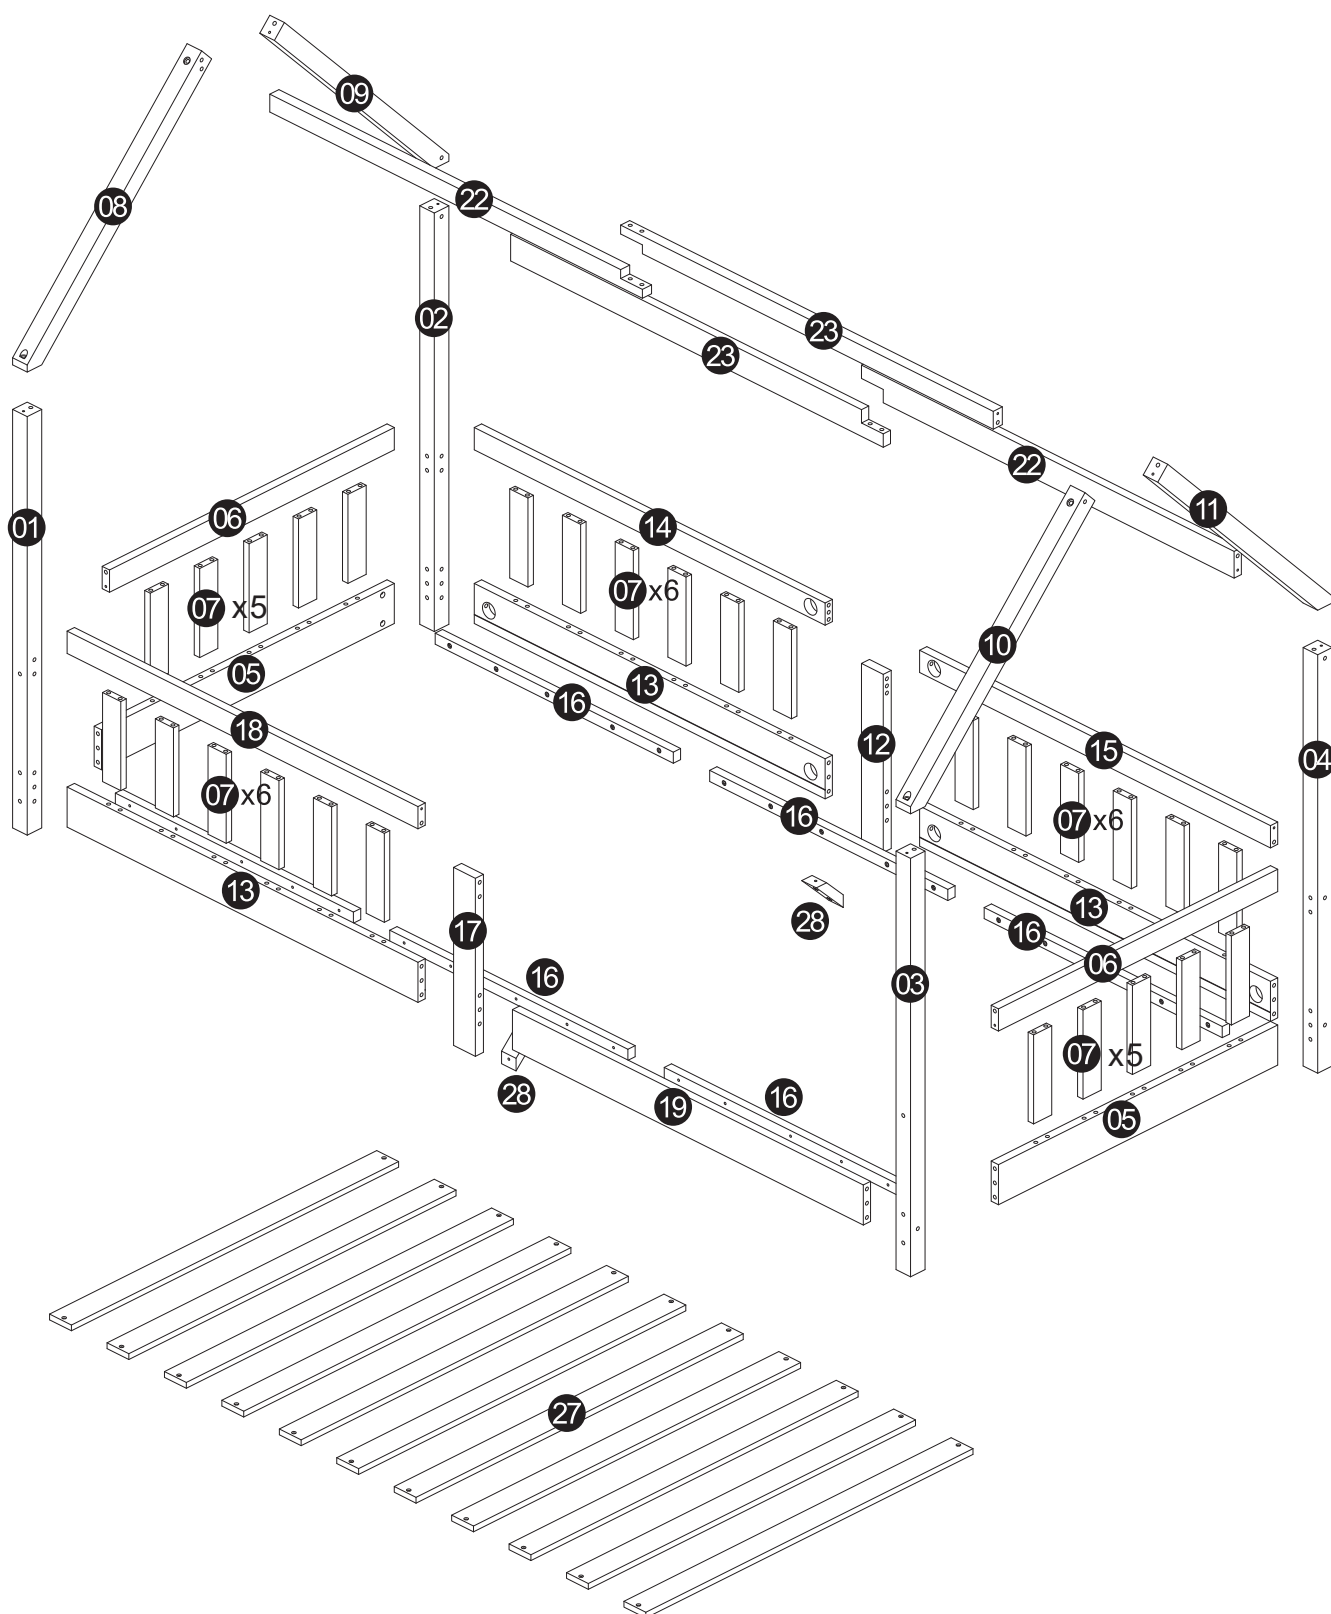

HARDWARE

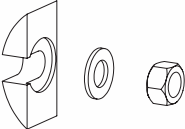

A x12  M6x80	B x8  	C x154  Ø8x30	D x13  Ø6x80	E x4  Ø6x70
F x3  M6x140	G x10  	H x1  Ø6x100	J x56  Ø4x30	L x4 
M x4  M6x40	P x2  	Q x2  	R x2  	

TOOLS



Ruler - Use this ruler to help correctly identify the screws



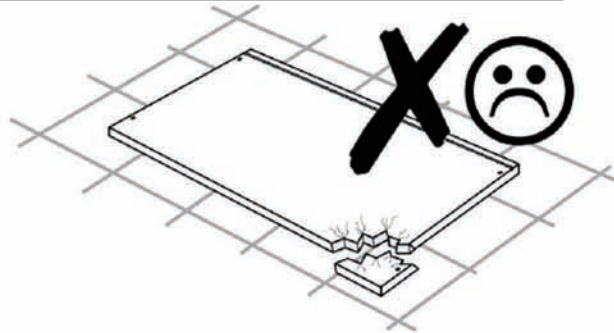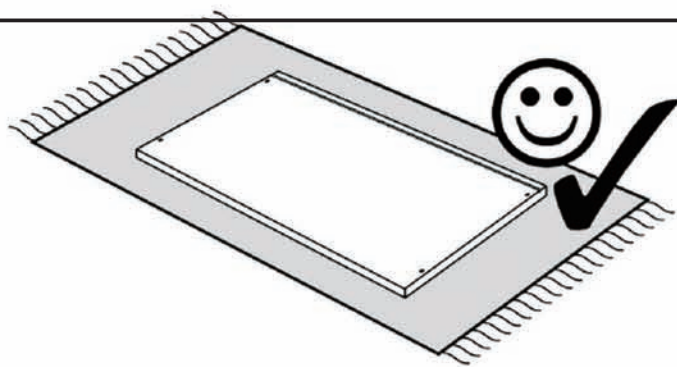

C x38



Ø8x30

x2

05

x2

06

09

x3

13

11

C

C

C

19

C

C

C

15

14

C

C

C

C

18

22

C

C

23

C

C

22

C

23


C

02

C x40



Ø8x30

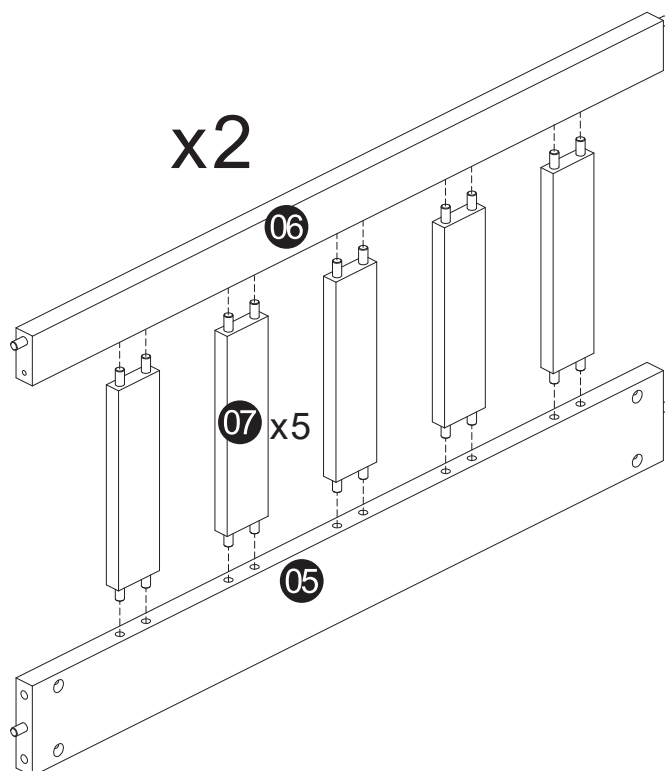

03

A x8



M6x80



B x8



D x4




Ø6x80

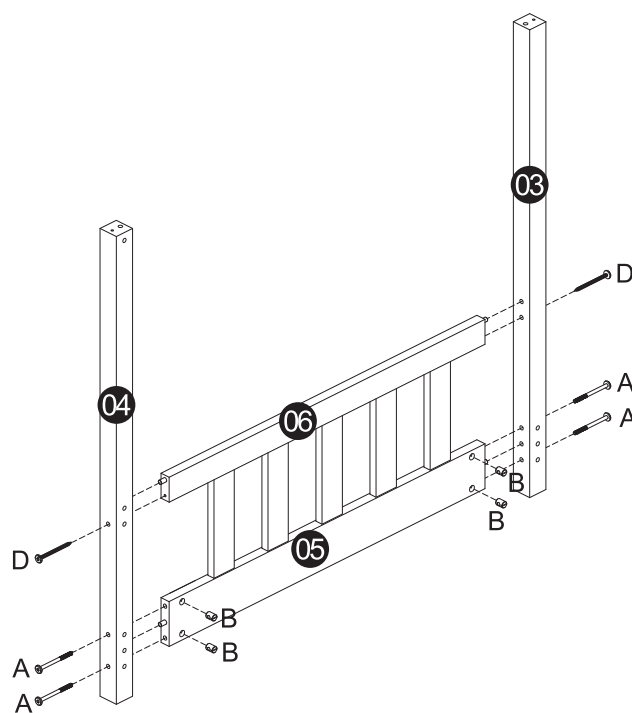
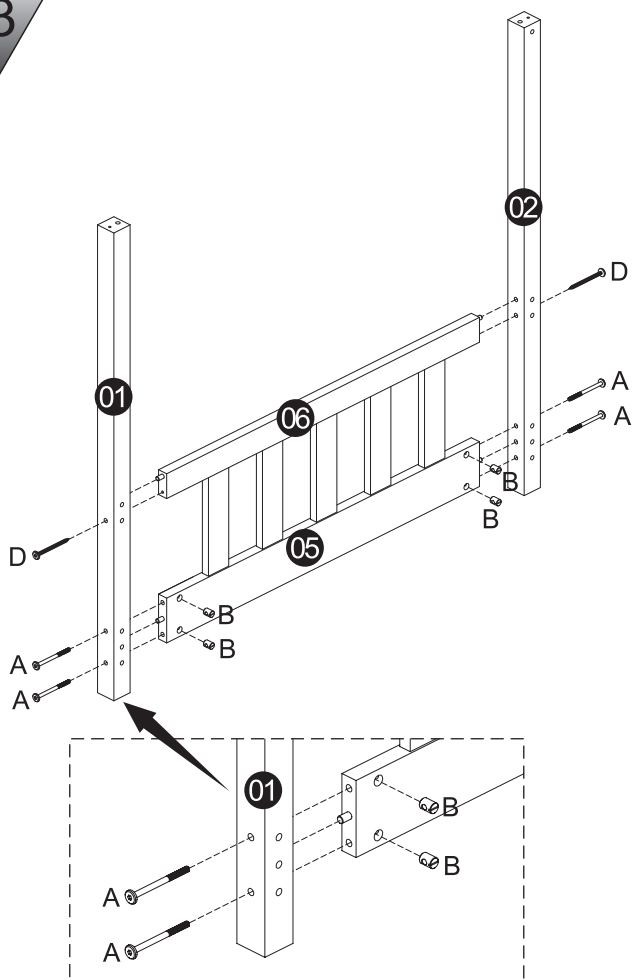


04

D x2



Ø6x80

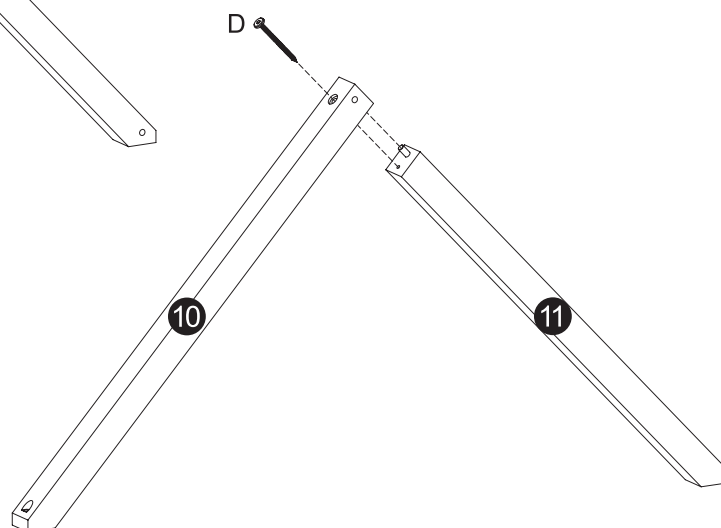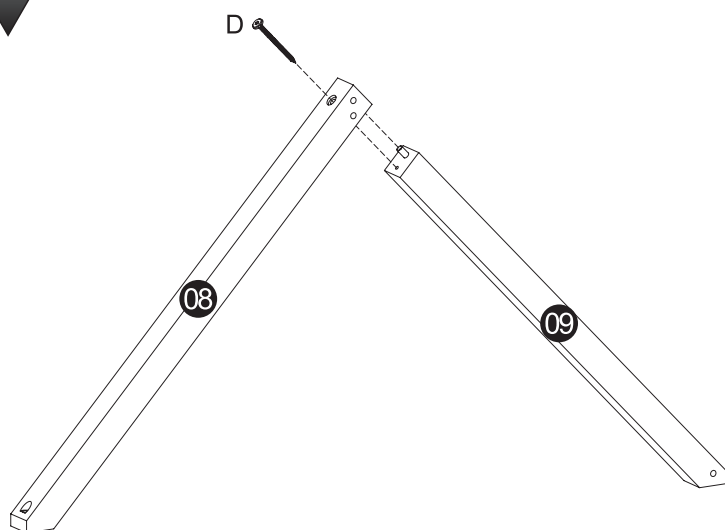

05

C x4






Ø8x30


E x4




Ø6x70

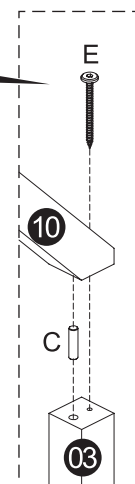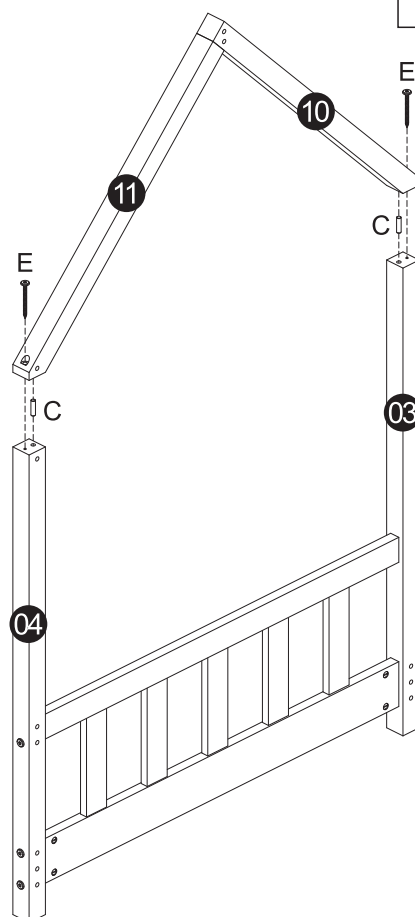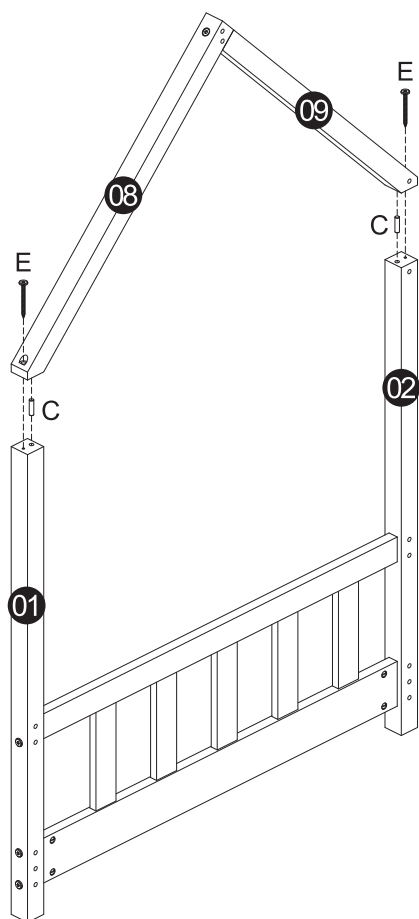

06

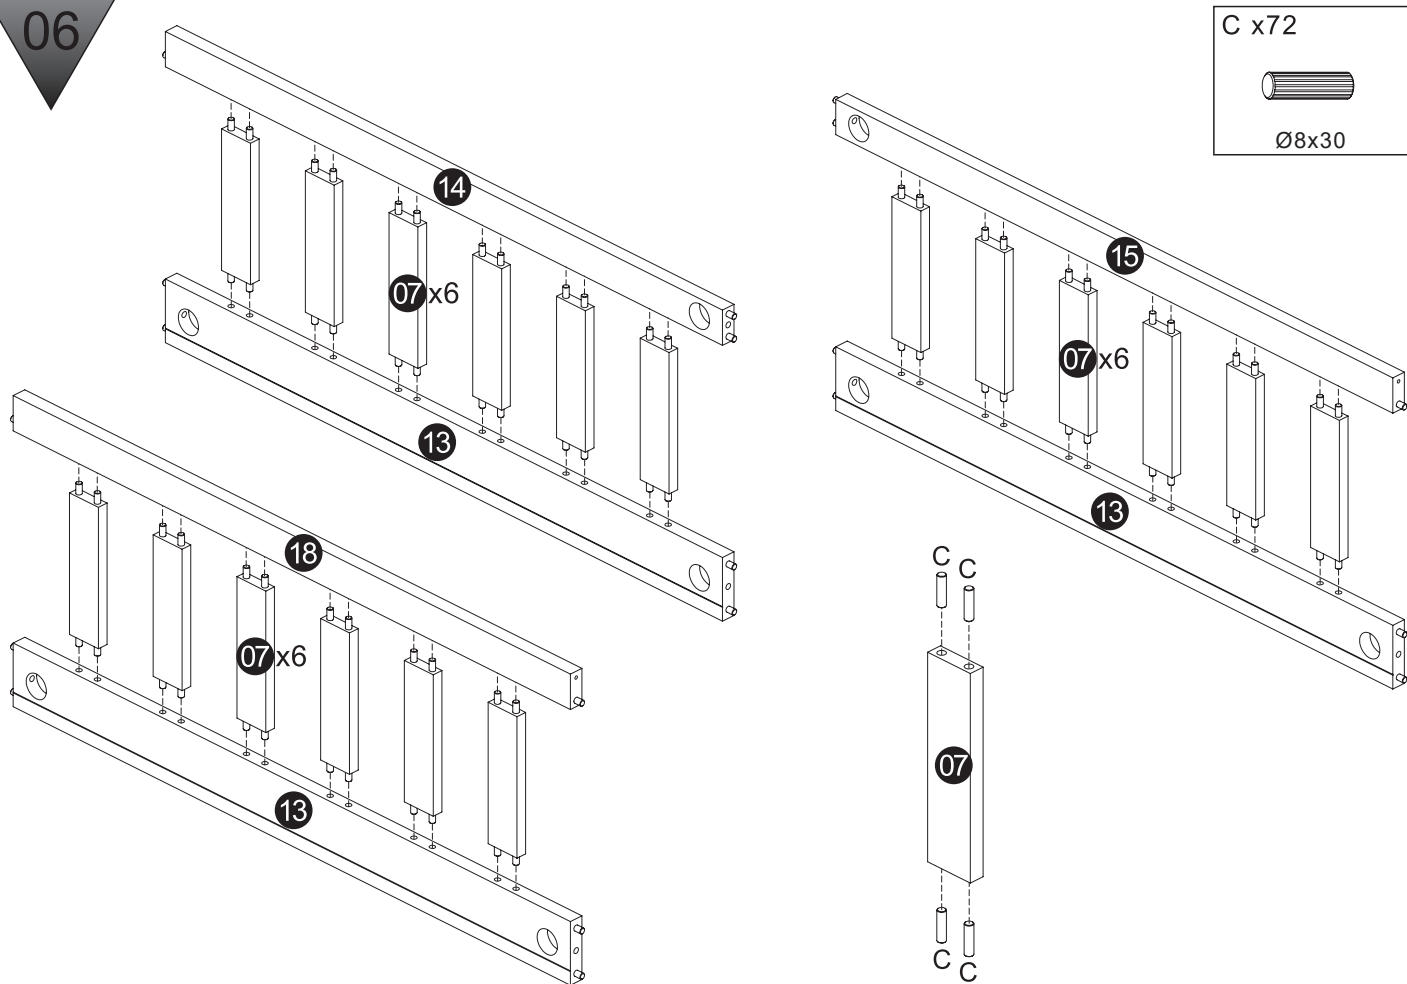

07

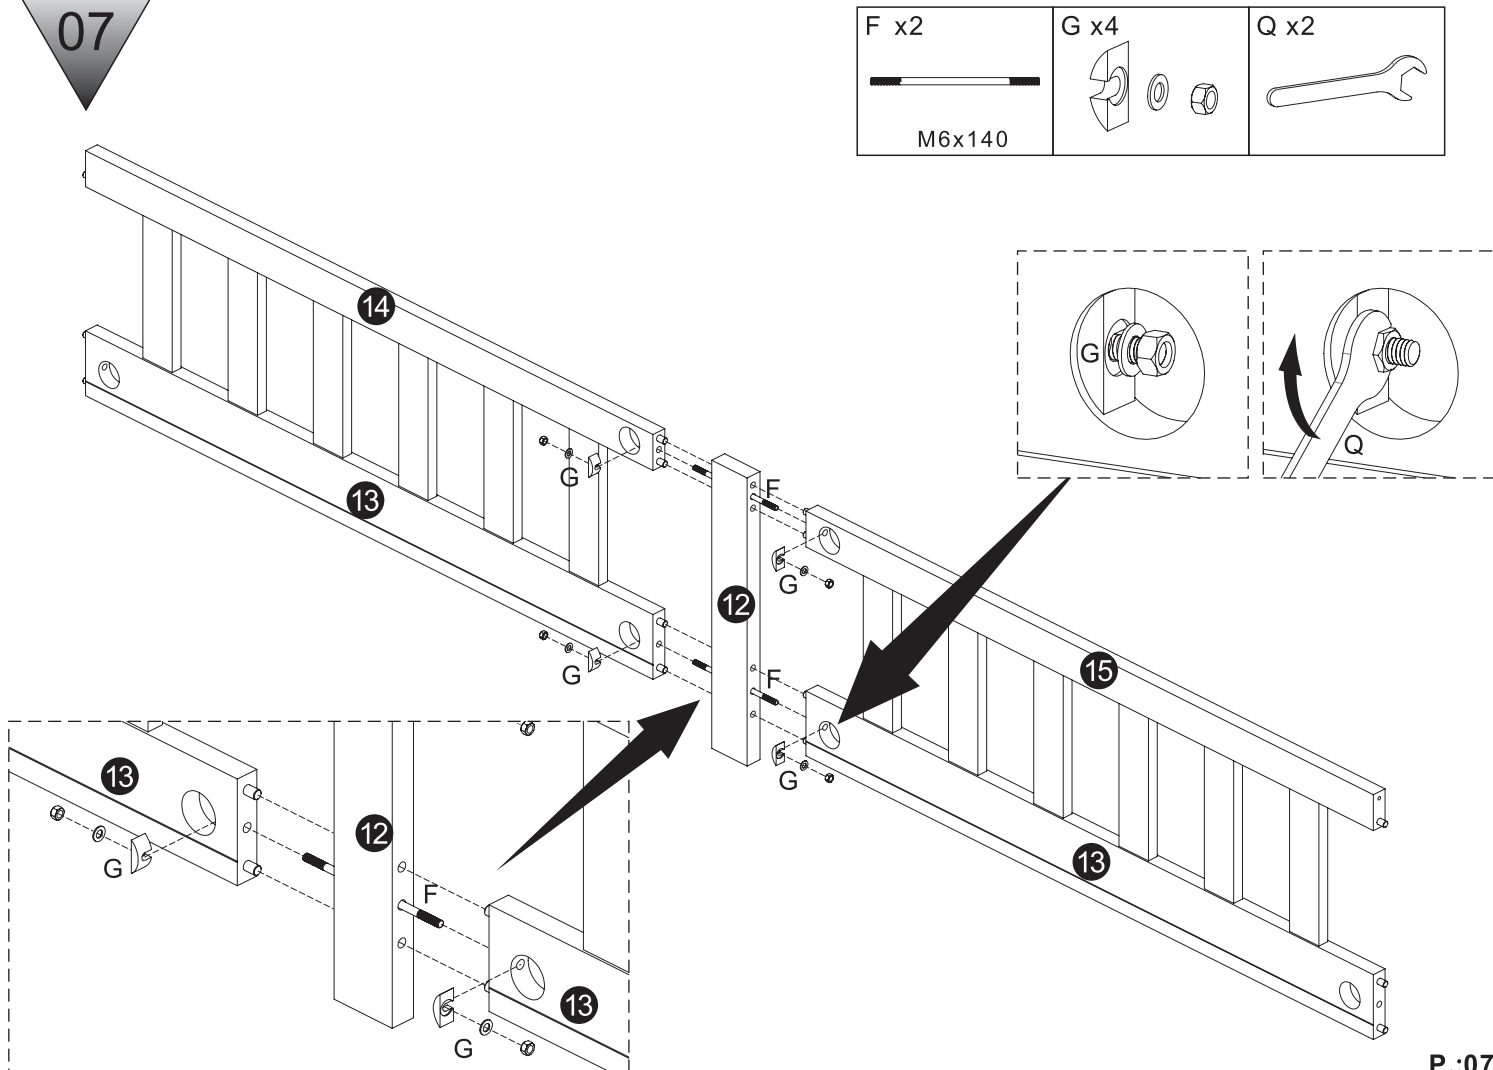


08

J x15



Ø4x30

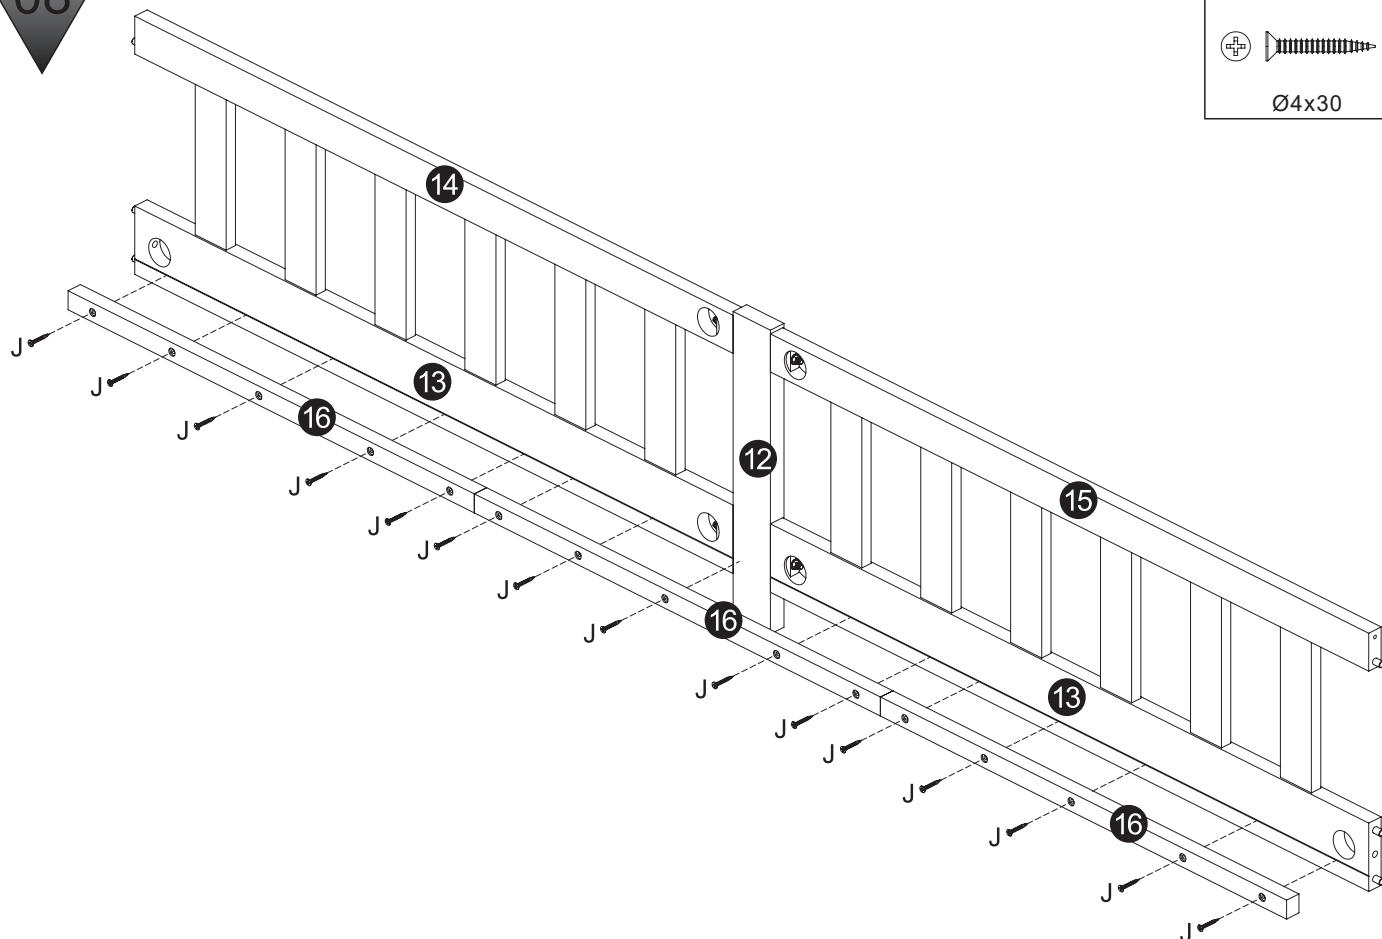


09

F x1



M6x140

G x2




H x1



Ø6x100

Q x2

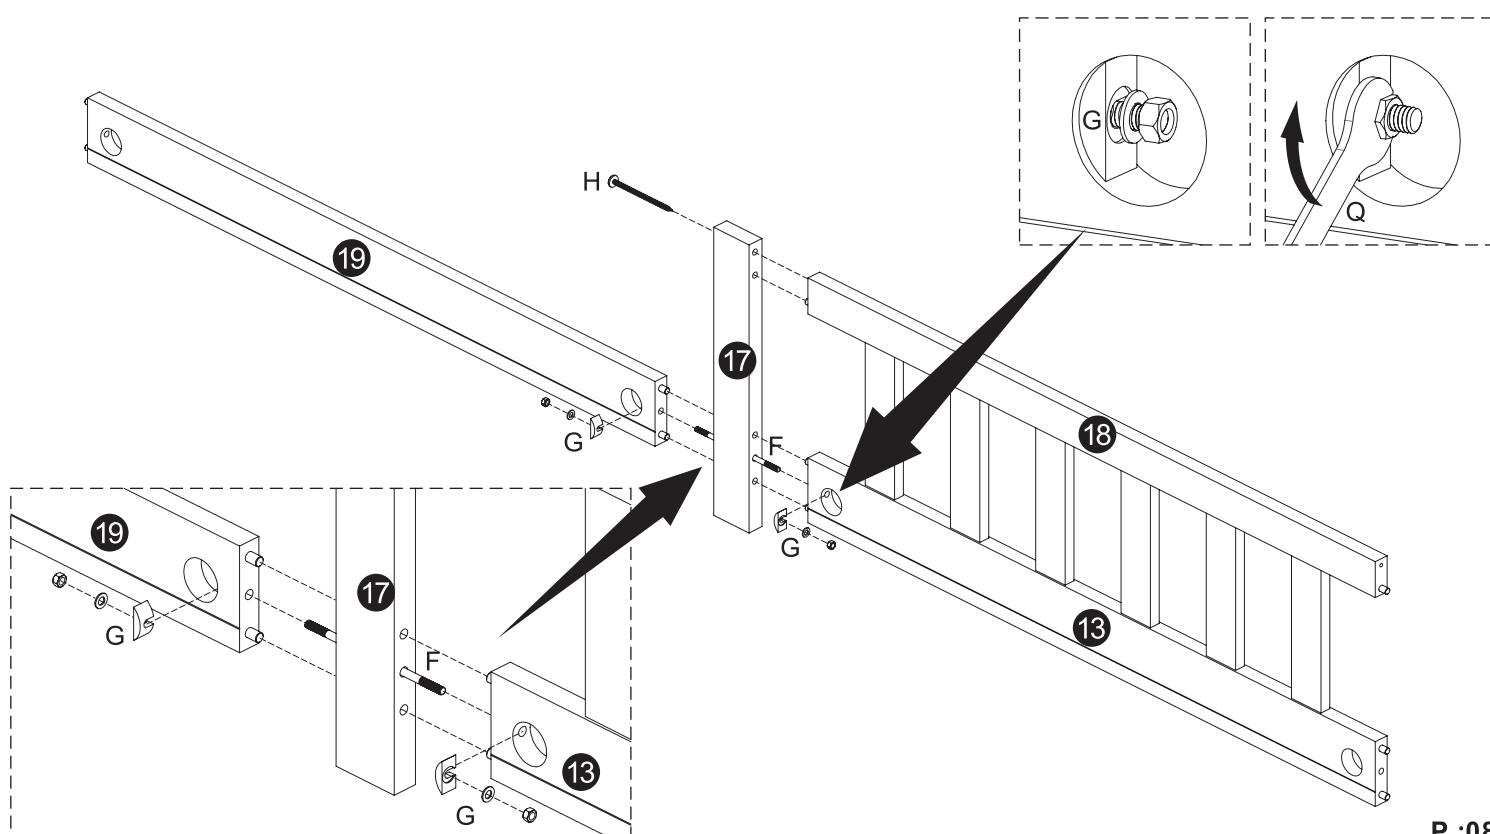


10

J x15



Ø4x30

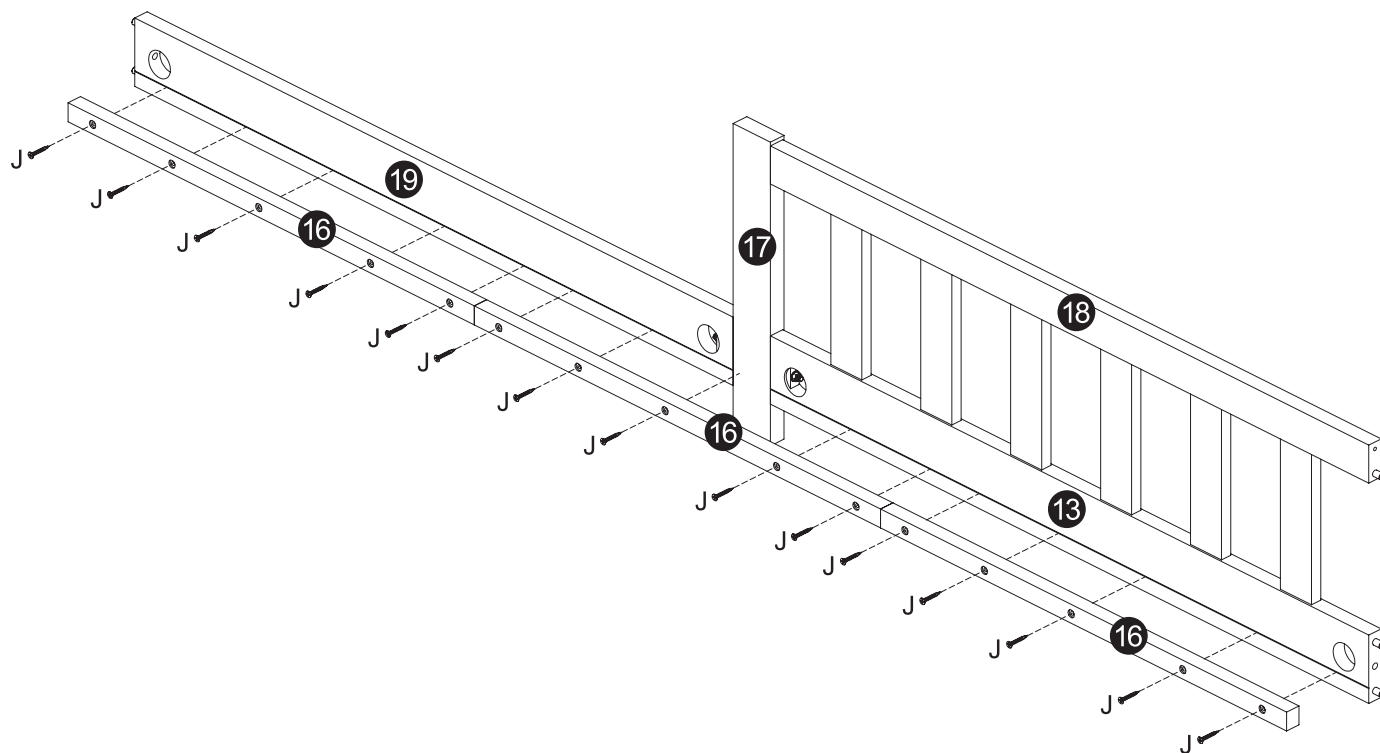

11


L x4




M x4




M6x40

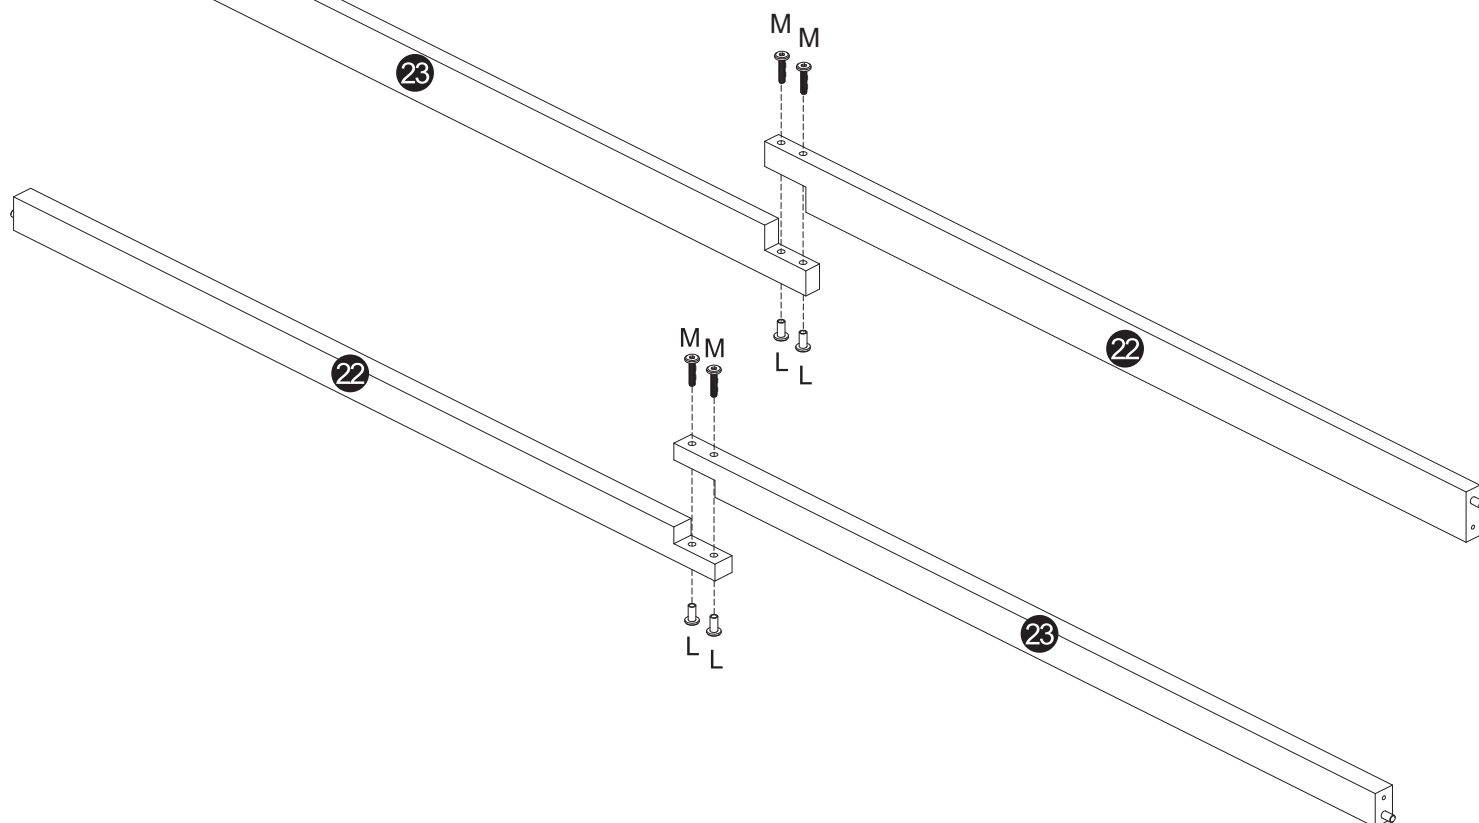

12

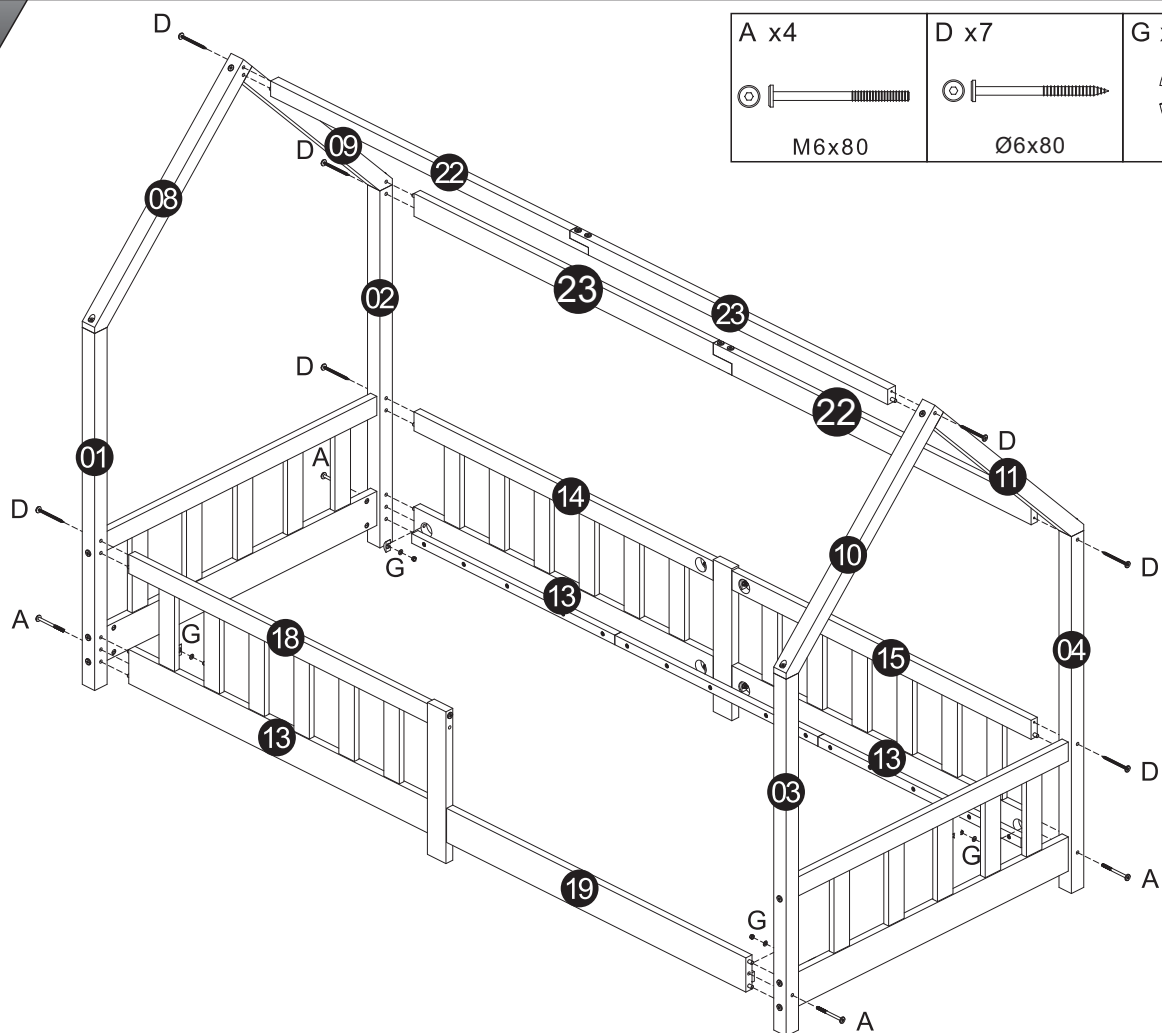

13

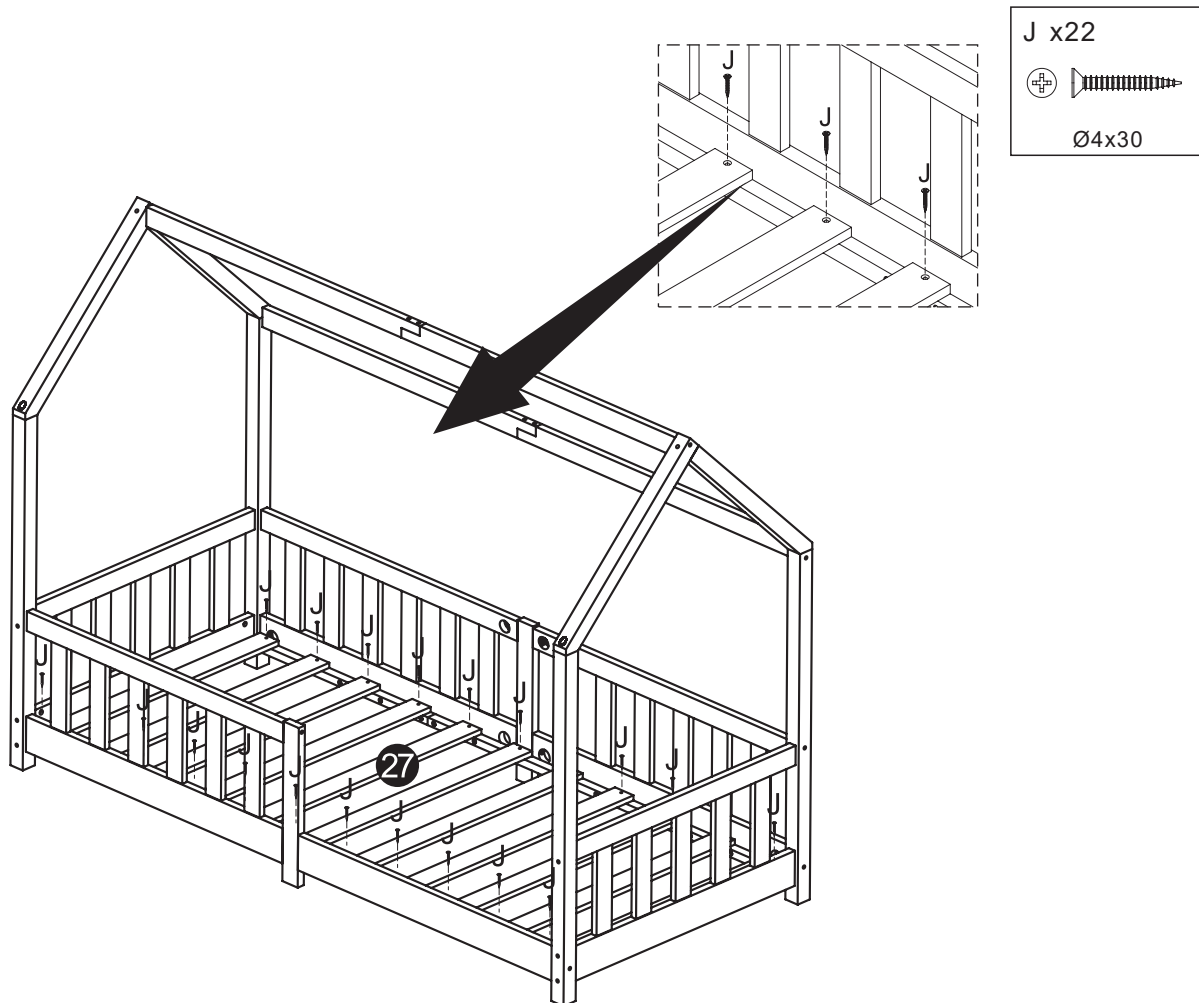


14

J x4




Ø4x30

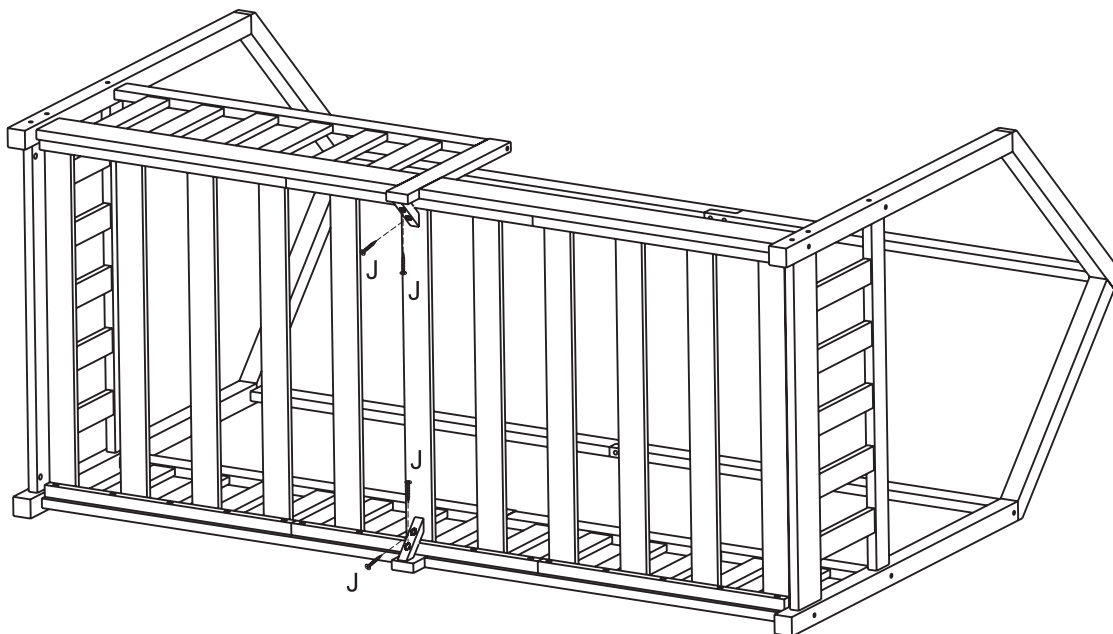

15

R x2

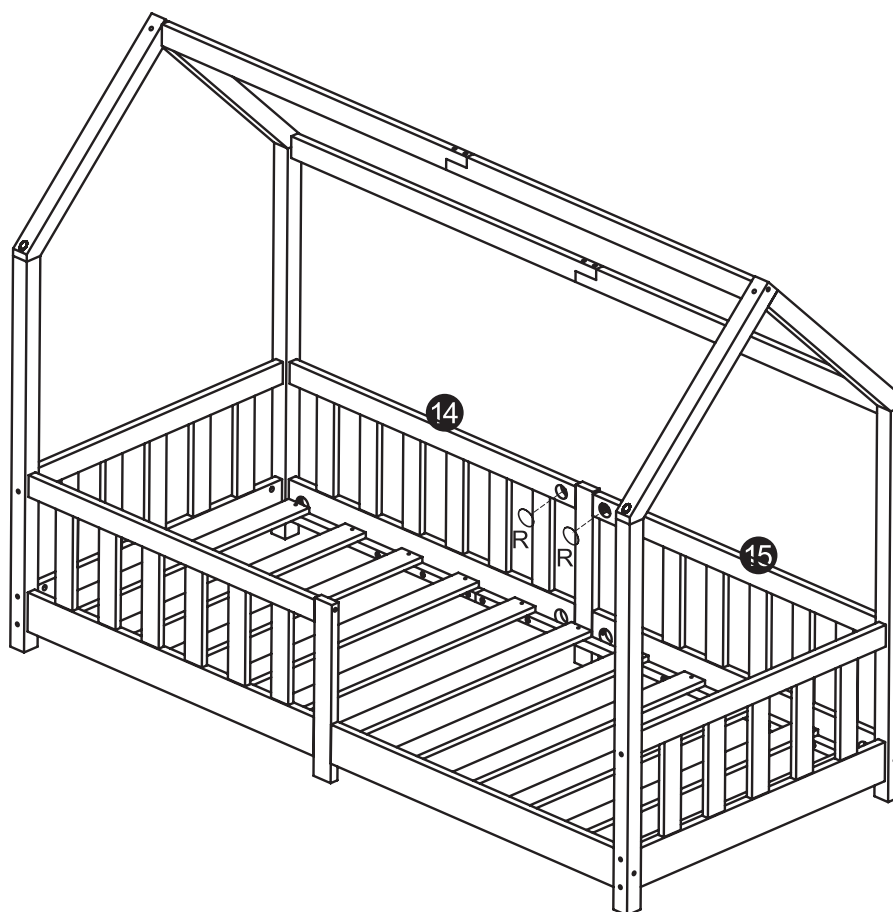

NO HANGING

